

The Club (steering wheel locking device)

Features:

- Installs in seconds
- New and improved, solid steel hooks for even greater security
- Vinyl coated to prevent interior damage

Instructions

- Turn steering wheel one full revolution, or as close to one full revolution as possible before turning vehicle off.
- Turn vehicle off.
- Extend the hooks of the car steering wheel lock in opposite sides of the steering wheel.
- Some space between the steering wheel and the car steering wheel lock is expected.
- Lock the car steering wheel lock using the keys supplied after securing the car steering wheel lock to your steering wheel as described.
- Never attempt to start or drive your vehicle with the car steering wheel lock locked onto the steering wheel.
- Unlock the car steering wheel lock with your key. Slide hooks toward each other.
- Remove the car steering wheel lock from the steering wheel and store it out of the way.